

PHOTIST

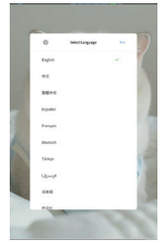

Initialization(Not required for some models)

Follow the on-screen instructions.

- Select Language
- Connect to Wi-Fi
- Scan the QR code on the photo frame using your phone camera to download the Photist app.

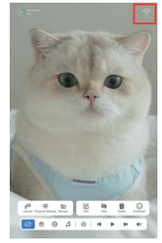

Connect to Wi-Fi

- Tap the photo frame screen to display the menu bar.
- Tap the 【Wi-Fi】 button to connect to a network.



Download the Photist App

There are two ways to download the app.

- Tap 【Upload】 to display the QR code then scan it using your phone camera to download the app.
- Search for 【Photist】 in your app store and download the app.




Log In to the App

- Tap 【Agree】.
- Check the box to agree to the Privacy Policy.
- Select a login method then tap 【Log In】.



Bind the Photo Frame via the App

- Tap the photo frame screen, then tap 【Upload】 to display the QR code.
- Open the Photist app.
  Tap 【+】 to add a device.
  Tap 【Scan QR Code】 to scan the QR code on the photo frame, or enter the invitation code displayed on the frame to bind it.

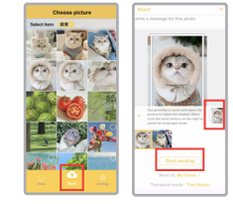



Upload Photos

- Tap 【Transfer】 to view your photos.
- Select your photos, tap 【Transfer】 then tap 【Start Transfer】.
- Pinch to zoom and drag the photo to adjust the display area. Choose landscape or portrait orientation as needed.
- Once adjusted, tap 【Start Transfer】 and wait for the photos to finish uploading.

01 Photo Album Mode

In Photo Album Mode, the device displays uploaded photos as a digital photo frame, allowing you to browse and manage them.

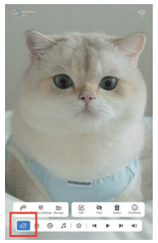

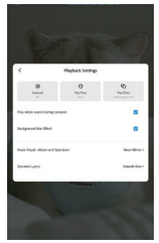

- **Upload** Display the device QR code. Scan it with the Photist app to upload photos.
- **Playback Settings** Set the photo slideshow playback mode, transition interval, and display effects.
- **Manage** View all photos in the album and manage multiple photos at once.
- **Edit** Adjust the photo size and display area to fit the screen.
- **Hide** Hide the current photo. It can be restored from the Manage page.
- **Delete** Delete the selected photo.
- **Feedback** Express your feelings about the photo or add it to Favorites.

02 Calendar Mode

In Calendar Mode, the device displays date information and supports task reminders.






- **Previous Month Next Month** Tap the arrows to switch months.
- **Today** Return to Today.
- **To-Do List** View or add to-do items.
- **Calendar View** Change the calendar background style.
- **Month Week/Day** Switch between Month, Week, and Day views.

03 Clock Mode

In Clock Mode, the device displays the current time and supports alarm and countdown settings.

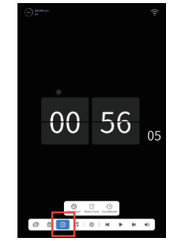





- **Clock Style** Switch between different clock display styles.
- **Alarm** Set an alarm to receive a reminder at the specified time.
- **Countdown** Set a countdown duration and receive an alert when it ends.

04 Music Mode

In Music Mode, the device functions as a Bluetooth speaker and displays synchronized lyrics and a music visualizer.

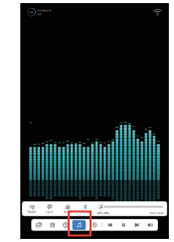

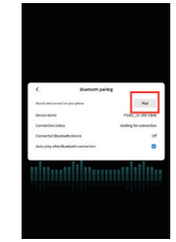

- **Playlist** View the photo frame's local music library and Bluetooth music list.
- **Lyrics** Switch between different lyric display styles.
- **Visuals** Switch between different music spectrum visualizer effects.
- **Bluetooth**
  Pairing: Tap 【Pair】. When the frame displays Pairing Mode Activated, it is ready to connect via Bluetooth.
  Device Name: View the photo frame's Bluetooth device name.
  Turn on Bluetooth on your phone, search for the photo frame's device name, and tap to connect.
  Connection Status: View the current Bluetooth connection status.